

TMC-18 Contactor (220V Single Phase 60Hz 3HP)

1. Motor goes to **T2** (Black) and **T3**(White)

2. Power goes to **L2** (Black) and **L3** (White)

3. Operating Switch (OS) **Terminal 3** goes to **L3** (with the power connection)

4. Operating Switch (OS) **Terminal 4** goes to Relay Terminal (RT) **A2**

5. Relay Terminal (RT) **A1** goes to **L2**(Jumper wire)

***Installing Safety Interrupt Switch**

6. Remove Wire From Operating Switch (OS) **Terminal 4** to Relay Terminal (RT) **A2**

7. One wire of Safety Interrupt Switch (SS1) to Operating Switch (OS) **Terminal 4**

8. One wire of Safety Interrupt Switch (**SS2**) to Relay Terminal (RT) **A2**

